 


Nail Drill

 
 
 
User Manual

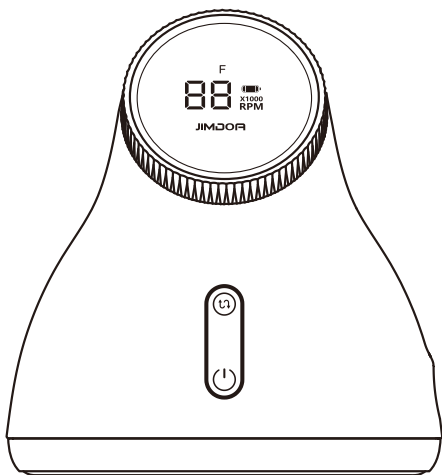

JIMDOA makes you more attractive

JMD-E101P

NAIL DRILL SYSTEM

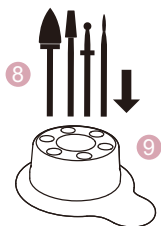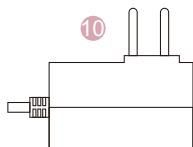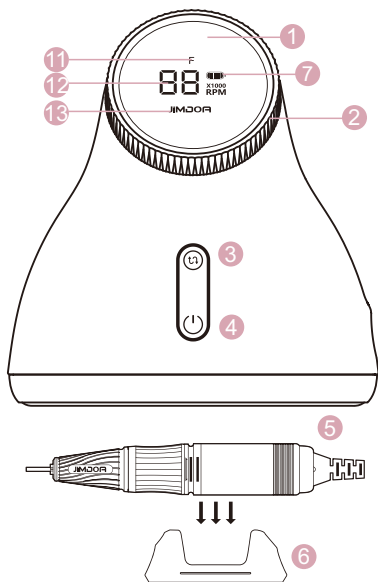

- ① Optical Electroplating Screen
- ② Speed Controller Rotary Knob
- ③ Forward/Reverse Rotation Direction Button
- ④ Power Button/ Pause Key
- ⑤ Handpiece
- ⑥ Base
- ⑦ Battery Status
- ⑧ 4 X Nail Drill Bits
- ⑨ Nail Drill Bits Silicone Box
- ⑩ Power Adaptor
- ⑪ Forward/Reverse
- ⑫ Speed Display
- ⑬ OEM Logo

SPECIFICATION

 
1. Input Voltage: AC 100V-240V DC 15 2A
2. Output Voltage: DC 3~15V
3. Power: 45W
4. Weight: 1kg
5. Dimension: L23*W17.5*H12 (cm)

PRECAUTION

1. Do NOT disassemble the handpiece
2. Do NOT drop the handpiece
3. Do not work in a humid environment.
4. Operating Environment Humidity: 30-75%
5. Operating Environment Temperature: +10°C~26°C
6. Turn off the power when changing the bits
7. Make sure the power switch is off before plugging in the power cord to avoid an unexpected injury due to sudden start.

SET AND OPERATION

1. Set drill bits

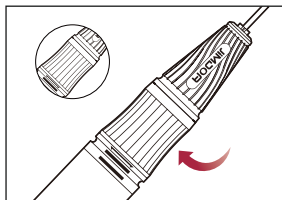


1

◀ Turn left side clockwise until you hear it click into the place

2

 Take out the original bit ▶

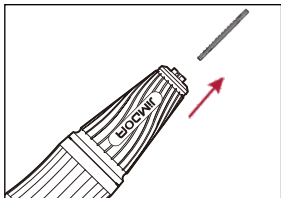


3


◀ Insert the 3/32 " size bit


4

 
Turn right side anti-clockwise ▶
to lock the bit tightly

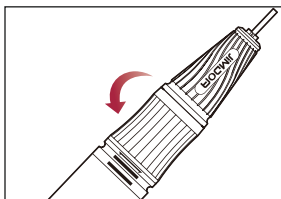

2. Operation Steps:


1, When pressing the on-off key "", the battery capacity indicator light and "Jimdoa" logo show up together indicating that the product is ready to enter the working state.

2, When pressing the on-off key "", the speed "00" display on the screen, and the machine enters the standby state.

3, Press the on-off key "" again, the machine stops working. At this time, and the speed display alternate light flashes to indicate that it is in standby mode.

4, When adjusting the rotary knob with clockwise rotation, it is the up shift to adjust 0-35(RPM*1000).

5, When adjusting the rotary knob with anti-clockwise direction, it is the down shift to adjust 35-0(RPM*1000).

6, When pressing the forward and reverse "" key, the machine will enter R/F switching mode, R stands for reverse rotation and F stands for forward rotation.

7, Do not use the machine for a long time, please connect the power adapter to charge the machine after finish the manicure work.