

# Nail Drill User Manual

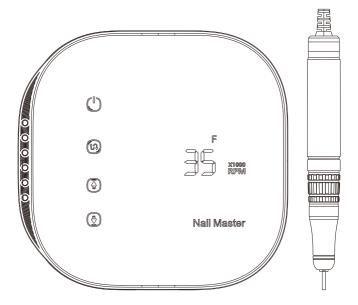

#### JIMDOA makes you more attractive

JMD-S108

# NAIL DRILL SYSTEM

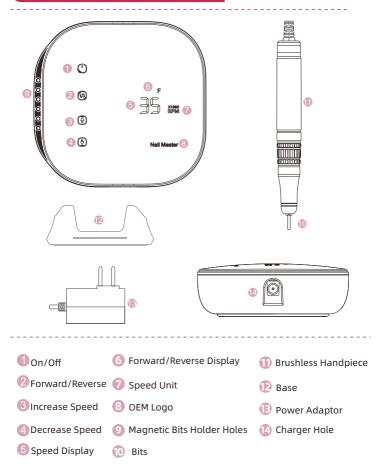

# SPECLFLCATION


- 1.Power: 48W
- 2.Input Voltage: DC 24-2A
- 3.Weight:1.2kg
- 4.Dimension:L265\*W241XH72mm
- 5.Speed:0-35000RPM

# PRECAUTION

1.Do NOT disassemble the handpiece
2.Do NOT drop the handpiece
3.Do not work in a humid environment.
4.Operating Environment Humidity: 30-75%
5.Operating Environment Temperature:+10°C~26°C
6.Turn off the power when changing the bits
7.Make sure the power switch is off before plugging in the power cord to avoid an unexpected injury due to sudden start.

### **SET AND OPERATION**

#### 1.Set drill bits

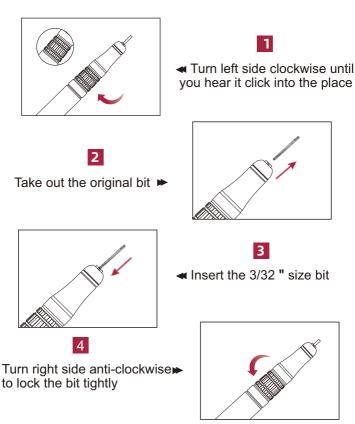

#### 2. Operation Steps:

- 1:Connect the power supply, the alternate light is flashing, indicating that the product is ready to enter the working state.
- 2:When you touch the on-off key "()", the function keys light upfrom top to bottom, and the machine enters the standby state.
- 3:When touching the forward and reverse " 🔞 " keys, the machine will enter the working state. R stands for reverse rotation and F stands for forward rotation. Touch again to realize R / F conversion.
- 4:When touching the " (2)" key , it is the upshift key 0-35 (RPM\*1000), long press can continuously jump to 35 (RPM\*1000), or adjust to the desired setting gear.
- 5:When the " 🕑 "key is touched, it is the downshift key 35-0 ( RPM\*1000 ), long press can continuously jump to 0 ( RPM\*1000 ), or adjust to the desired setting gear.
- 6:Press the power button again, the machine stops working at this time, and the alternate light flashes to indicate that it is in standby mode.
- 7:Do not use the machine for a long time, please unplug the power cord.