
# **Brushless Pen Nail Drill**



JMD-119

## **NAIL DRILL SYSTEM**

- On/Off
- Type-C Mount
- Speed Display
- Forward/Reverse
- Increase Speed
- O Decrease Speed
- Pause
- OEM Logo
- Nail Drill Bit

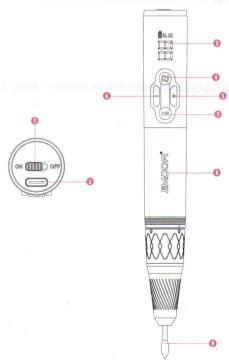

#### **SPECIFICATION**

1.Power:10W

4.Weight:126g

2.Input Voltage:DC:5V==2A

5.Dimension:180\*22 mm

3.Battery Capacity:7.4V 320mAH

6.Speed:0-35000RPM

#### **PACKING LIST**

1\* Brushless Pen Nail Drill

1\* Type-C Cable

1\* Nail Drill Bits

1\* User Manual

#### **SET DRILL BITS**



①Turn left side clockwise until you hear it click into the place



②Take out the original bit



③Insert the 3/32"size bit



Turn right side anti-clockwise to lock the bit tightly

#### **PRECAUTION**

- 1.Do NOT disassemble the handpiece.
- 2.Do NOT drop the handpiece.
- 3.Do not work in a humid environment.
- 4. Operating Environment Humidity: 30%-75%.
- 5.0perating Environment Temperature: +10°C~26°C.
- 6.Turn off the power when changing the bits.

### **OPERATION STEPS**

- 1. When you turn On/Off button, the nail drill enter into the standby state.
- 2.When you press" +" or" -", the speed will adjust from 00-35 (RPM\*1000)or 35-00(RPM\*1000), you can adjust to the desired speed.
- 3. When you press " 🕲 " button to adjust forward and reverse.
- 4.When you press " Du " button, the handpiece enters the pause state. Press the pause button again to release the pause.
- 5.If the battery is running out of power, please charge it in time. Please pay attention that you should charge it with 5V===2A power adapter, otherwise it will cause the nail drill breakdown.